

USERS MANUAL

BLUETOOTH SPEAKER

OG47

Thank you for purchasing the product, before using, please read the following instructions.

MODES OF OPERATION

+ / ►► In TF / Bluetooth mode when short press this button: next song

► Long press: volume up. Don't work in AUX mode.

◀◀ / - In TF / Bluetooth mode when short press this button: previous song. Long press: Volume down. Don't work in AUX mode.

►► In TF mode, short press this button: Play / Pause. In Bluetooth mode, short press this button: Play / Pause / Answer / End / Cancel dial / Pair. In Bluetooth mode, double click: last number redial. Long press for 2 seconds: reject calls. In TF / AUX mode, press it will be TF card and AUX exchange.

BLUETOOTH PAIRING

- Make sure the Bluetooth Speaker is in the off state.
- Press ON / OFF key to Bluetooth mode, blue LED will flash 6 times. And short press Play / Pause key, blue and red LED flash alternately.
- Follow the operating instruction of your mobile phone for Bluetooth and allow your mobile to searching Bluetooth headset state. Typically, this is done by going to **set up**, **connect** or **Bluetooth** menu and then selecting the option to search Bluetooth devices.
- The mobile can see S10 Bluetooth Speaker and ask if you wish to connect your mobile with this speaker. Press **Yes** or **Confirm** to confirm this action.
- Enter password or PIN 0000, and press **Yes** or **Confirm**.

IMPORTANT NOTICE: If the connection is successful, blue LED will flash. If the pairing is unsuccessful, the LED Blue and Red will still flash alternately. You need to pair again.

FLASHING INSTRUCTION

Green LED flash: In TF card MP3 mode

Green LED ON: TF card MP3 in pause or in AUX mode

Blue LED flash: In Bluetooth mode

Red and blue LED flash alternately: Bluetooth pairing

Red LED ON: Charge

Red LED OFF: Full power


Red LED Flash: Low power







1:0-FEATURES

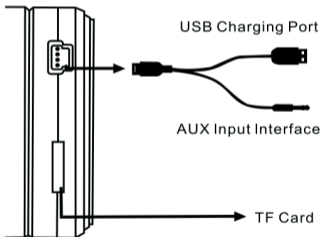Battery voltage: $5\pm 0.5V$	Capacity: 350mAh
Charge voltage: $5\pm 0.5V$	Loudspeakersize: 45mm x 44mm 3W
Net weight: 230g	S/N: $\pm 95\text{Db}$
Distortion: $\approx 0.5\%$	S/N: $\pm 95\text{Db}$

JACK INSTRUCTION



SPECIFICATIONS

-  **Insert the TF card to play music.** Built-in TF smart decoder, you can listen to MP3 music stored in TF card.
-  **AUX Input plug.** While works with AUX, it is easily to listen to the sound from PC, iPod/iPhone, MP3/MP4.
-  **Bluetooth Handfree** works with the Bluetooth for wireless communication.
-  **Stereo Bluetooth Speaker** supporting A2DP/AVRCP, allow you enjoy wireless HI-FI stereo music.

NOTICE

- Do not let children play the product.
- Do not hit or beat the product.
- Do not use in very humid and high temperature environments. Product performance will decrease when it is used in cold regions.
- Do not throw the product into the fire.
- Do not block speaker's net above the body.
- Please send to repair when the product is broken. Do not disassemble it by yourself.
- It's not covered under warranty when the product has metal of rust, surface spalling and other natural oxidation.

INSTRUKCJA OBSŁUGI

GŁOŚNIKA BLUETOOTH

OG47

Dziękujemy za zakup produktu, przed użytkowaniem prosimy o zapoznanie się z poniższą instrukcją.

TRYBY DZIAŁANIA

Bluetooth – w tym trybie muzyka jest odtwarzana z urządzenia (np. smartphone lub tabletu) po poprzednim sparowaniu. W tym trybie można również odbierać rozmowy telefoniczne.

Karta pamięci – muzyka jest odtwarzana z karty pamięci microSD (brak w zestawie).

AUX – muzyka jest odtwarzana po podłączeniu urządzenia kablem mini jack.

PRZYCISKI

+ / ►► - w trybie **Karta Pamięci / Bluetooth** naciśnij krótko, aby odsłuchać następny utwór. Naciśnij i przytrzymaj, aby zwiększyć głośność. W trybie AUX przycisk nie działa.

◄◄ / — - w trybie **Karta Pamięci / Bluetooth** naciśnij krótko, aby odsłuchać poprzedni utwór. Naciśnij i przytrzymaj, aby zmniejszyć głośność. W trybie AUX przycisk nie działa.

►► - w trybie **Karta Pamięci** naciśnij krótko, aby wstrzymać odtwarzanie. Naciśnij ponownie, aby wznowić odtwarzanie.

W trybie Bluetooth krótkie naciśnięcie spowoduje następujące działanie: **Play / Pauza, Odebranie rozmowy / Zakończenie rozmowy, Zakończenie wybierania połączenia / Parowanie**. Podwójne naciśnięcie spowoduje wybranie ostatniego numeru, długie naciśnięcie: odrzucenie połączenia.

W trybie **Karta Pamięci / AUX** naciśnięcie przycisku spowoduje zmianę trybu odtwarzania między odtwarzaniem z karty pamięci i wejścia AUX.

PAROWNANIE BLUETOOTH


Naciśnij przycisk **ON/OFF**, aby włączyć głośnik. Niebieska dioda mignie 6 razy. Naciśnij krótko przycisk **Play/Pause** – dioda zacznie migać naprzemiennie na niebiesko i czerwono.

Postępuj zgodnie z instrukcją urządzenia (smartfonu, tabletu, komputera PC). Aby połączyć się z głośnikiem – wejdź w ustawienia, znajdź opcję Bluetooth a następnie wybierz: wyszukaj urządzenia (lub podobnie, w zależności od modelu). Na liście powinien pojawić się model: Omega BT speaker. Wybierz z listy głośnik, w przypadku, gdy urządzenie zapyta o hasło wpisz: 0000 (4 zera). Po prawidłowym połączeniu dioda zaświeci się na niebiesko.

JEŚLI DIODA

- miga na zielono – głośnik jest w trybie **Karta Pamięci** - świeci na zielono,
- świeci na zielono – tryb **AUX**,
- miga na niebiesko: tryb **Bluetooth**,
- naprzemiennie świeci kolor niebieski i czerwony – tryb parowania,
- świeci na czerwono – tryb ładowania (po zakończeniu ładowania dioda gaśnie),
- miga na czerwono – niski poziom energii, podłącz ładowarkę.

Aby naładować głośnik podłącz urządzenie do portu USB komputera lub do ładowarki USB (brak w zestawie) za pomocą dołączonego kabla.

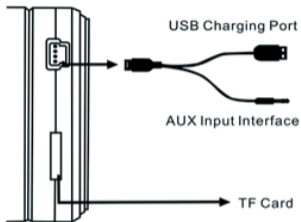

Akumulator: 350mAh,

Voltage: 5V

Głośnik: 45mm, 3W

Wymiary: 60 x 60 x 50mm.